

## Contents

1 Home Screen.....	2
2 Power on/Off and restart.....	4
3 File Transfer.....	5
3.1 Wired mode (USB2.0 OTG).....	5
3.2 Bluetooth wireless mode.....	7
4 X-Paper mode switch.....	9
5 Stylus settings.....	14
5.1 Stylus calibration.....	14
5.2 Button Customization.....	16
6 Screenshot Editing & Screen Recording.....	18
6.1 Screenshot Editing.....	18
6.2 Screen-off Notes.....	18
7 Anti-accidental finger touch settings.....	19
8 Benefits Collection.....	20
8.1 XPPen Notes Benefits Collection.....	20
8.2 WPS Benefits Collection.....	22

# 1 Home Screen


The home screen has a simple design, faster operation, and more personalized interface.



**Top status bar:** Check the drawing tablet status and notification messages.

**Bottom favorites bar:** Place frequently used apps, which you can remove or replace.

In addition to making home screen related settings (wallpaper, theme, widgets, etc.) in the settings, you can also tap and hold on a blank area of the home screen to enter the home screen settings interface, as shown below:

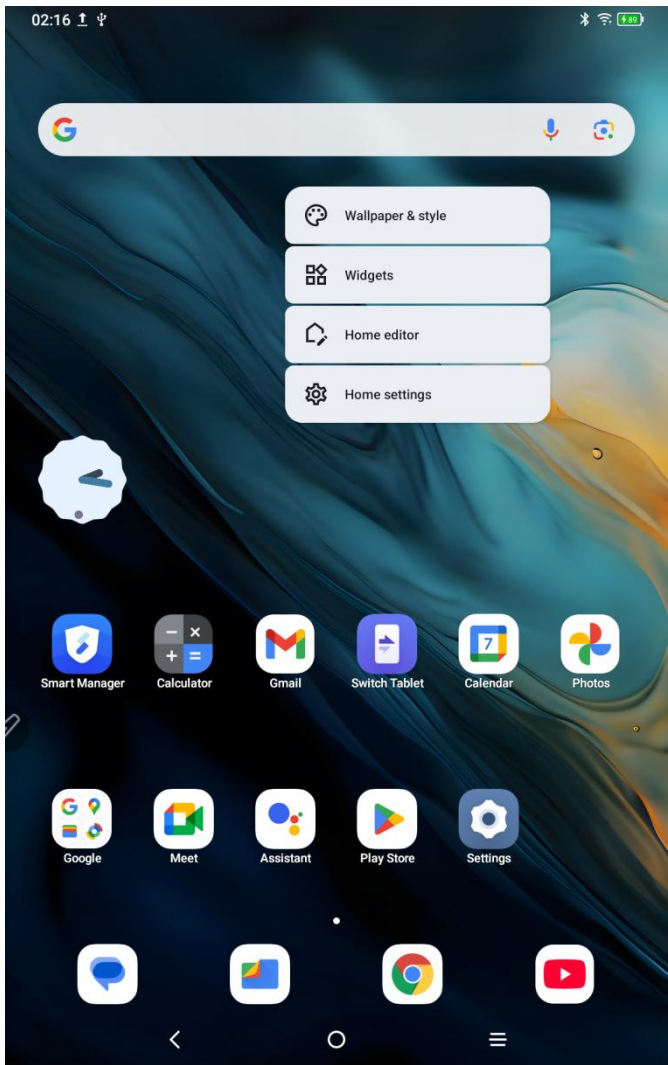




## 2 Power on/Off and restart

### **Power on**

Press and hold the power button for about 5 seconds. When the XPPen startup screen appears, release the power button.

### **Power off or Restart**

Press and hold the power button for about 2 seconds, a prompt page will appear (as shown below), select Power off or restart.

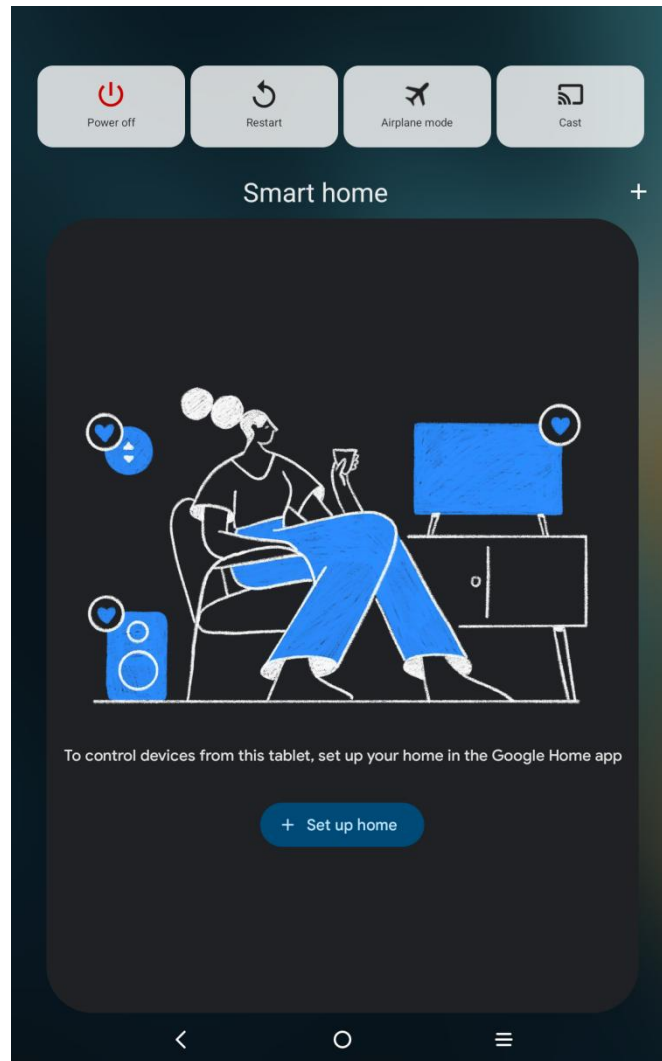

#### Note:

Restarting the tablet regularly can clean up the tablet's running cache and keep the tablet in good condition. If the tablet does not work properly, you can also try to solve the problem by restarting the tablet.

#### Force shutdown

If the tablet does not work properly and cannot be restored by restarting, you can try to press and hold the power button for more than 10 seconds to force a shutdown.

## 3 File Transfer


There are two ways to transfer or synchronize files between the tablet and PC.

### 3.1 Wired mode (USB2.0 OTG)

Here are the steps:

Step 1: Connect the tablet and PC via USB cable

Step 2: A pop-up window will appear on the tablet, prompting the user to select the usage method (transfer files or transfer pictures)

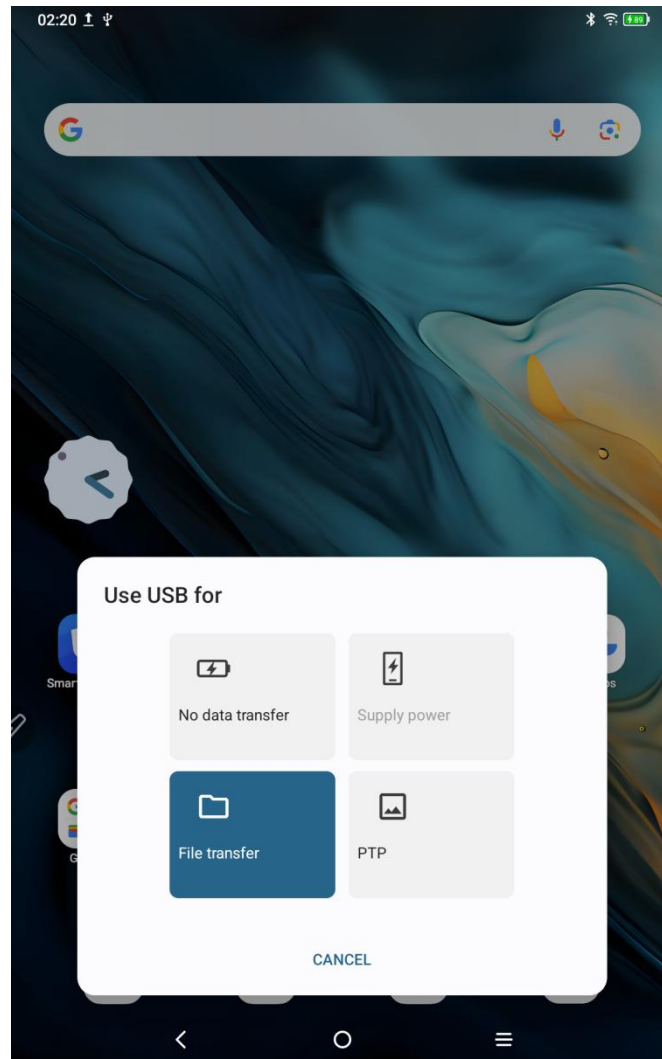


Step 3: Open the PC (Windows or Mac), and you will see the corresponding disk directory folder (as shown below).

**Notice:**

1. The Mac computer needs to install the Android File Transfer app first.
2. Computers running Windows XP may not be able to connect properly. Please download and install Windows Media Player 11 or above.

Windows system file directory diagram:

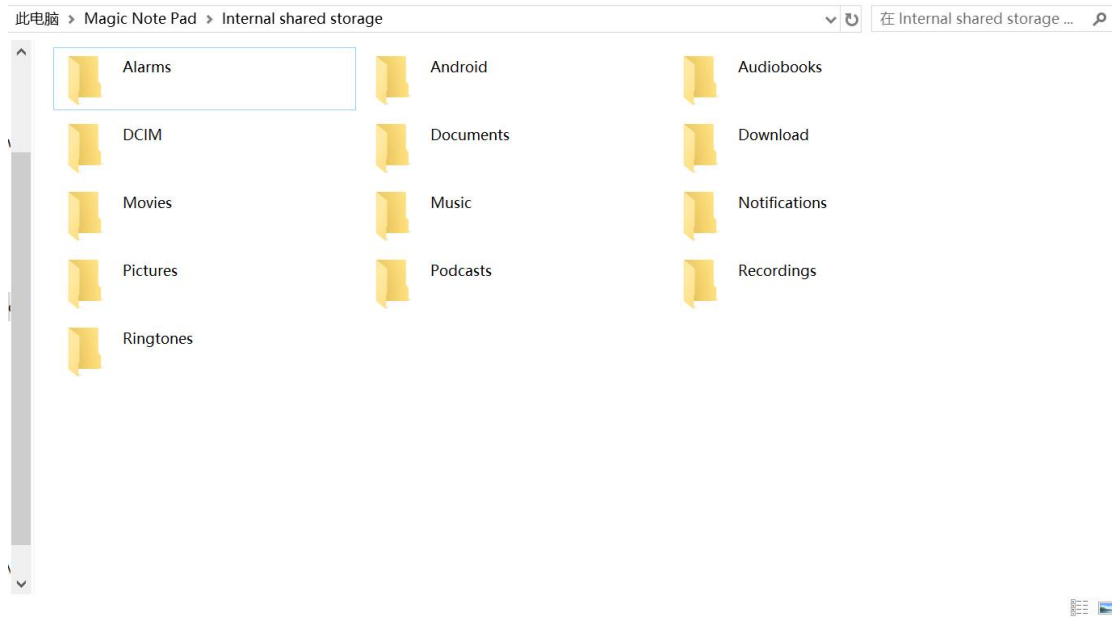

Mac OS system file directory diagram:



## 3.2 Bluetooth wireless mode


Compared with wired file synchronization, Bluetooth wireless is more convenient, but it currently only supports transmission between Android devices and Windows PCs, and does not support iOS and MacOS devices.

Use the following steps:

Step 1: Turn on the Bluetooth of the sending and receiving devices (using Windows PC as an example)


Find "Receive Files" in the Bluetooth options on the Windows PC and click to enter the "Receive Files" state

Step 3: Select the file you want to transfer on your tablet and choose "Bluetooth" to share, as shown below.

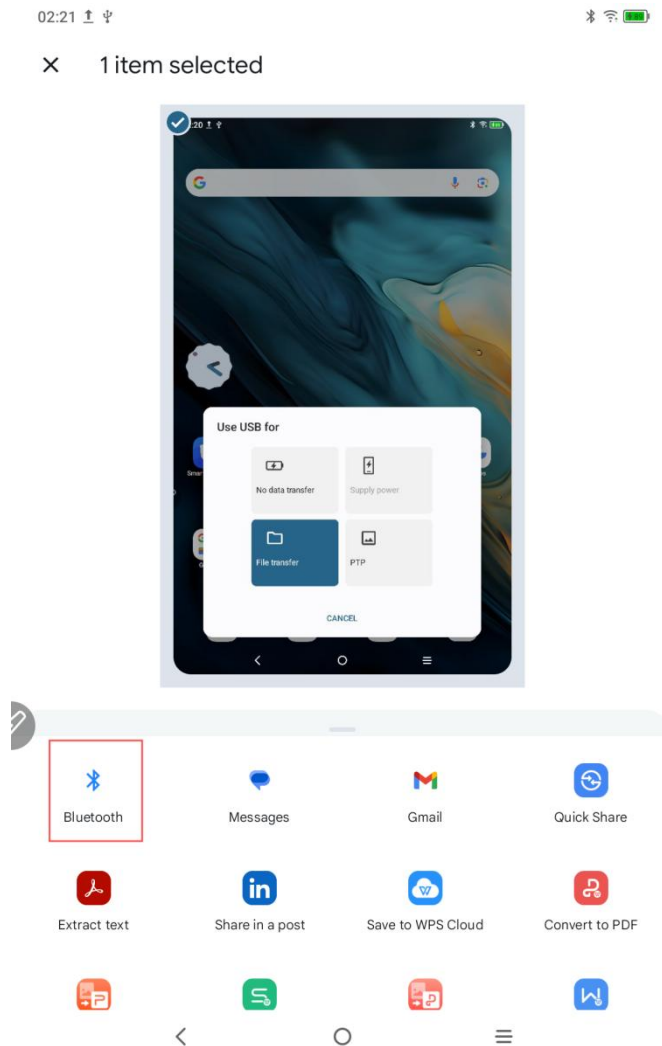

Step 4: Select the device to receive in the Bluetooth device list

Step 5: The PC receives the file and selects a path to save it. The file transfer is completed, as shown below.

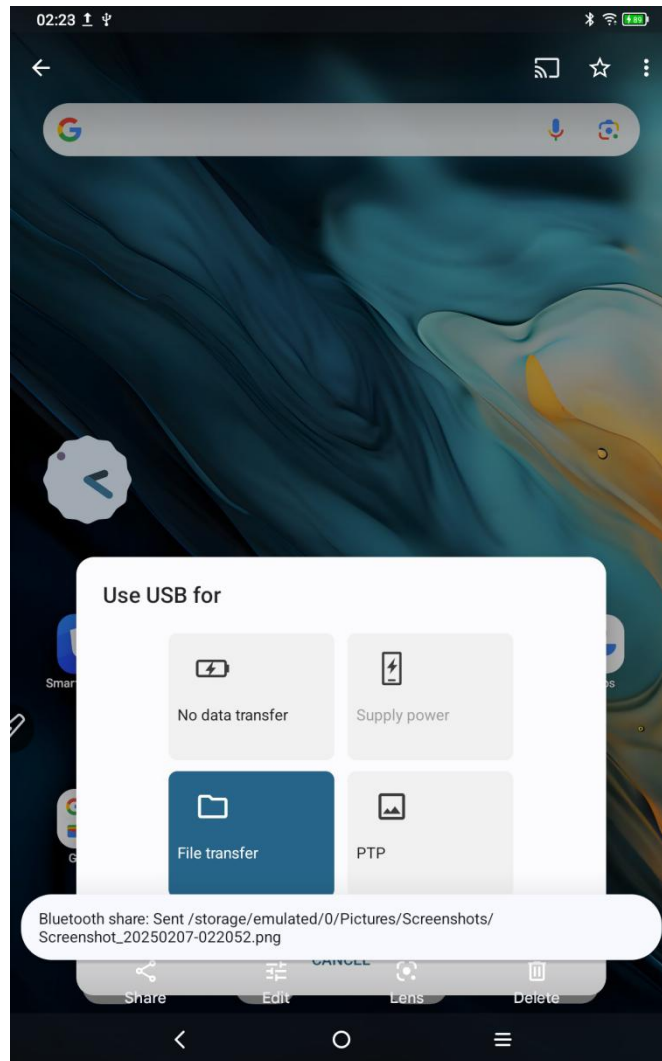

## 4 X-Paper mode switch

There are two ways to enter X-Paper:

Method 1:

The steps are as follows:

Step 1: Open Settings

Step 2: Find the fifth option "X-Paper zone" as shown below:

# Settings

Search settings

Wi-Fi  
UGEE-WiFi

Bluetooth  
Not connected

Connections  
Cast, USB

Home screen & lock screen  
Wallpapers, Home settings, Lock screen settings

X-Paper zone  
Nature Color Mode, Light Color Mode, Ink Paper Mode


Display  
Dark mode, Status bar, Font size

NXTVISION  
Visual Enhancement, Reading mode, Screen color

Sound  
Volume, Do Not Disturb


Notifications  
Manage app notifications, App icon badges

Step 3: There are three modes: "Nature Color Mode", "Light Color Mode" and "Ink Paper Mode" as shown in the figure below;

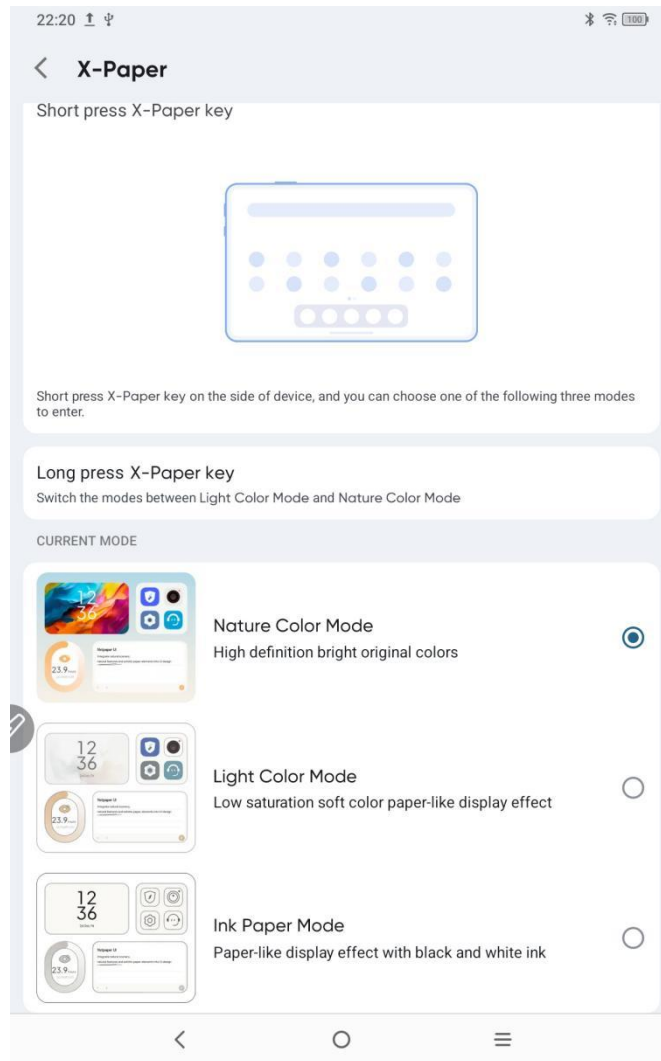

### < X-Paper zone

Short press X-Paper key

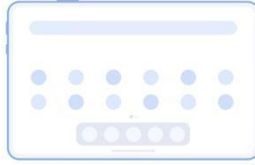

Short press X-Paper key on the side of device, and you can choose one of the following three modes to enter.

### Long press X-Paper key

Switch the modes between Light Color Mode and Nature Color Mode

CURRENT MODE



Nature Color Mode  
High definition bright original colors



Light Color Mode  
Low saturation soft color paper-like display effect




Ink Paper Mode  
Paper-like display effect with black and white ink



## < X-Paper

Short press X-Paper key

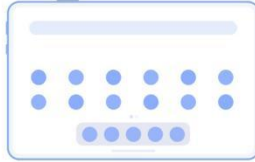

Short press X-Paper key on the side of device, and you can choose one of the following three modes to enter.

### Long press X-Paper key

Switch the modes between Light Color Mode and Nature Color Mode

#### CURRENT MODE



**Nature Color Mode**  
High definition bright original colors



**Light Color Mode**  
Low saturation soft color paper-like display effect




**Ink Paper Mode**  
Paper-like display effect with black and white ink



Method 2:

Long press the X-Paper key to enter, as shown below:

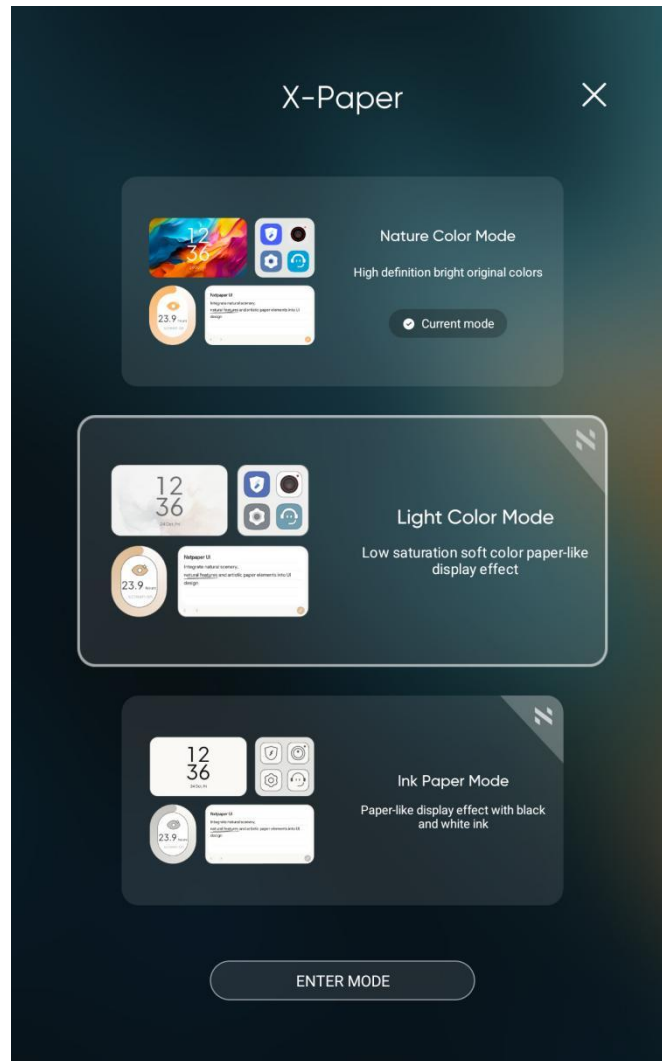

Note: You can switch between light color mode and true color mode by short pressing the X-Paper key

## 5 Stylus settings

This tablet stylus is a passive pressure-sensitive pen that does not require power or Bluetooth pairing. You can start drawing as soon as you pick up the pen.

### 5.1 Stylus calibration

The steps are as follows:

Step 1: Open Settings

Step 2: Find the 11th option "Advanced Features" as shown below:

# Settings

Search settings

Visual Enhancement, Reading mode, Screen color

Sound  
Volume, Do Not Disturb

Notifications  
Manage app notifications, App icon badges

Button & gestures  
System navigation, Gestures

Advanced features  
Convenience tools and other features

Smart Manager  
Auto-launch, Battery, Memory, Notification

Security & privacy  
App security, Device lock, Permissions




Location  
Location request

Safety & emergency  
Wireless Emergency Alerts

Apps  
App info, Default apps

Storage

### Step 3: Find the Handwriting offset

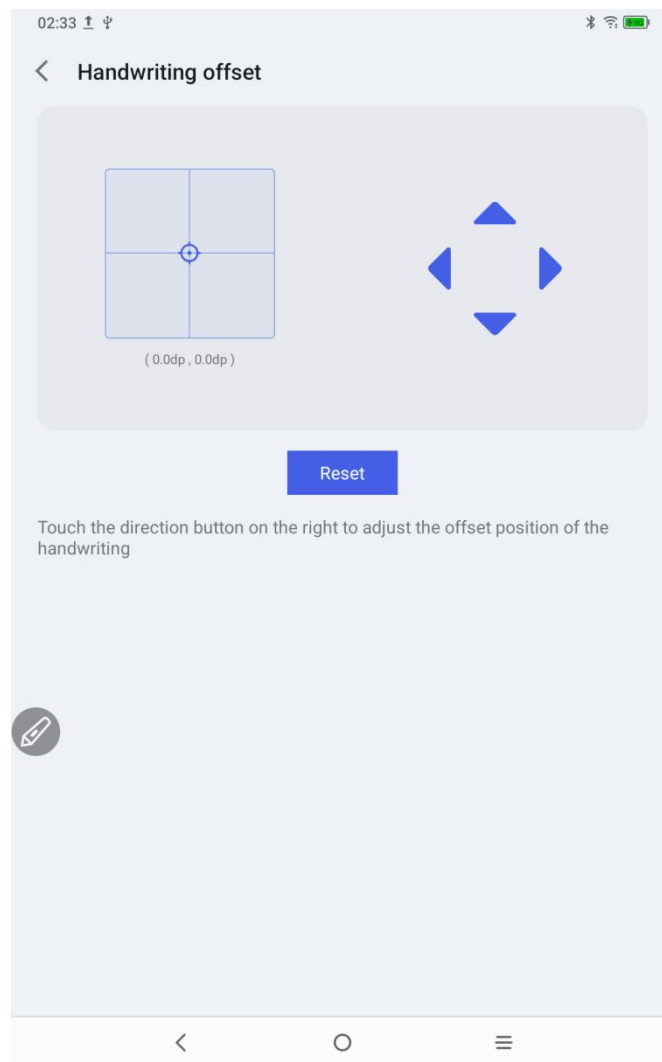

If there is a position offset between the pen tip and the actual pen landing point, you can turn on this function and click the direction key on the right to adjust the offset position of the note.

## 5.2 Button Customization


The steps are as follows:

Step 1: Open Settings

Step 2: Find the 11th option "Advanced Features"

Step 3: Find the stylus


Step 4: Find the Customize key function, as shown below:

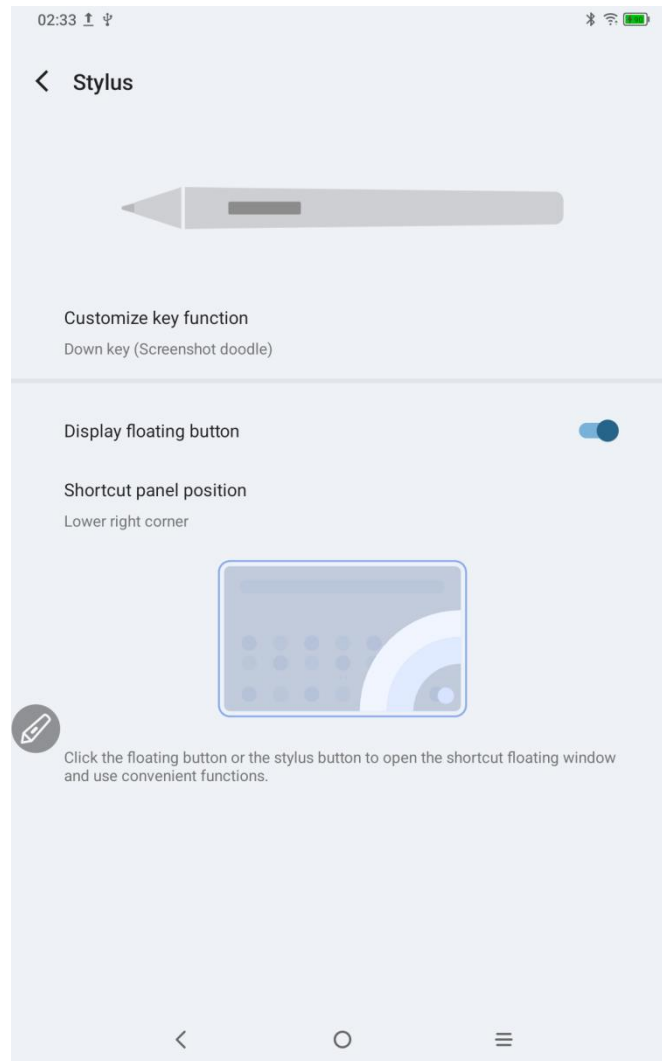

Step 5: Click on the Customize key function

NOTE: Use the pen buttons and tap on the screen simultaneously to enable this feature.

Click "Down Key", as shown in the figure below, users can define the pen button function by themselves.

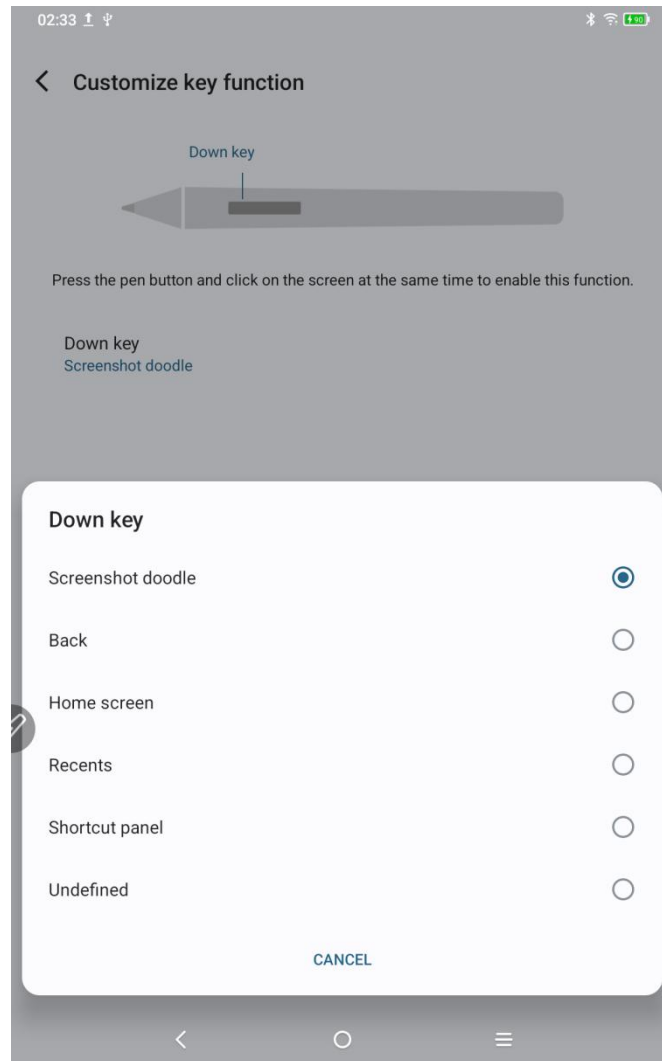

## 6 Screenshot Editing & Screen Recording

### 6.1 Screenshot Editing

Screenshot editing allows users to quickly take screenshots of the current interface while using a tablet, and write and annotate on the screenshots. The steps are as follows

1. When the tablet is in the **on-screen state** (except the locked state)
2. Press and hold the stylus button and double-click the screen

The system will automatically open the screenshot editing function for users to use

### 6.2 Screen-off Notes


Screen-off Notes allows users to quickly start writing and annotating when the screen

is off. The steps are as follows

1. When the tablet is in [the screen-off standby mode](#)
2. Press and hold the stylus button and double-click the screen

The system will automatically turn on the screen-off shorthand function for users to use.

In addition, users can also turn on/off this feature in [Settings→Advanced Features→Screen-Off Notes](#)

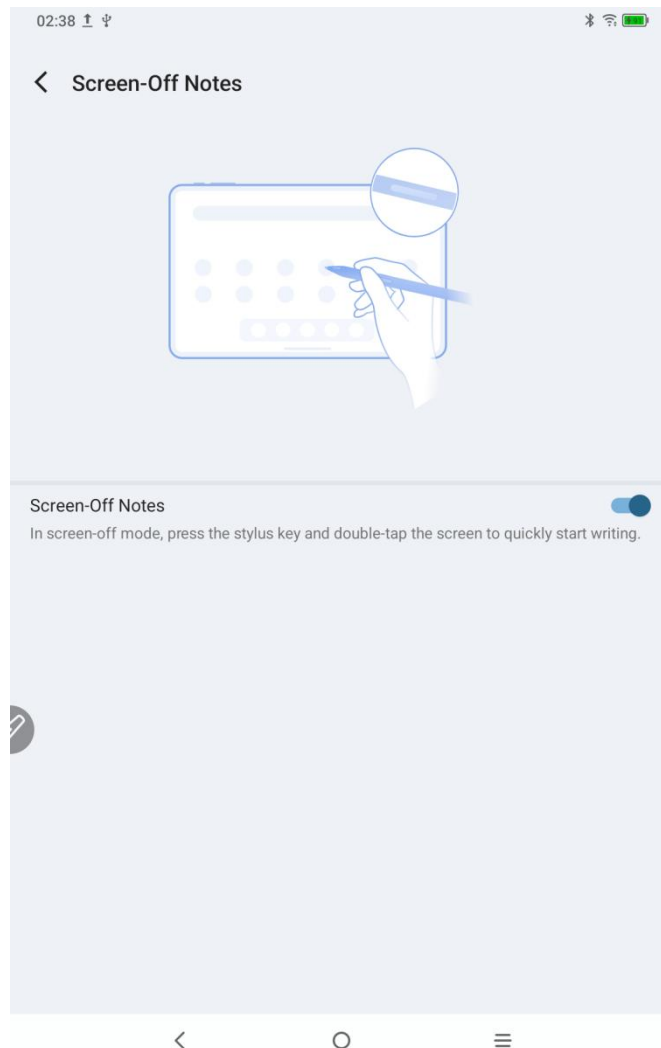

## 7 Anti-accidental finger touch settings

This tablet supports both hand touch and pen touch, and the system defaults to pen touch priority: that is, when the system detects that the stylus is working, finger touch does not respond.

In addition, we designed the switch to prevent accidental finger touches:

This switch is designed for handwriting scenarios. After disabling handwriting touch, you can focus on creation without worrying about any accidental touches. There are 2 operation paths:

1. Pull down the shortcut menu at the top and select the "Handwriting touch" switch;
2. To set, go to "Settings → Advanced Features → Handwriting Touch" option.

## 8 Benefits Collection


### 8.1 XPPen Notes Benefits Collection

The steps are as follows:

Step 1: Go to the desktop homepage or application drawer

Step 2: Find and open the XPPen Notes app

Step 3: When you start XPPen Notes for the first time, a pop-up window will appear asking you to get your membership. Click "Continue" as shown below:

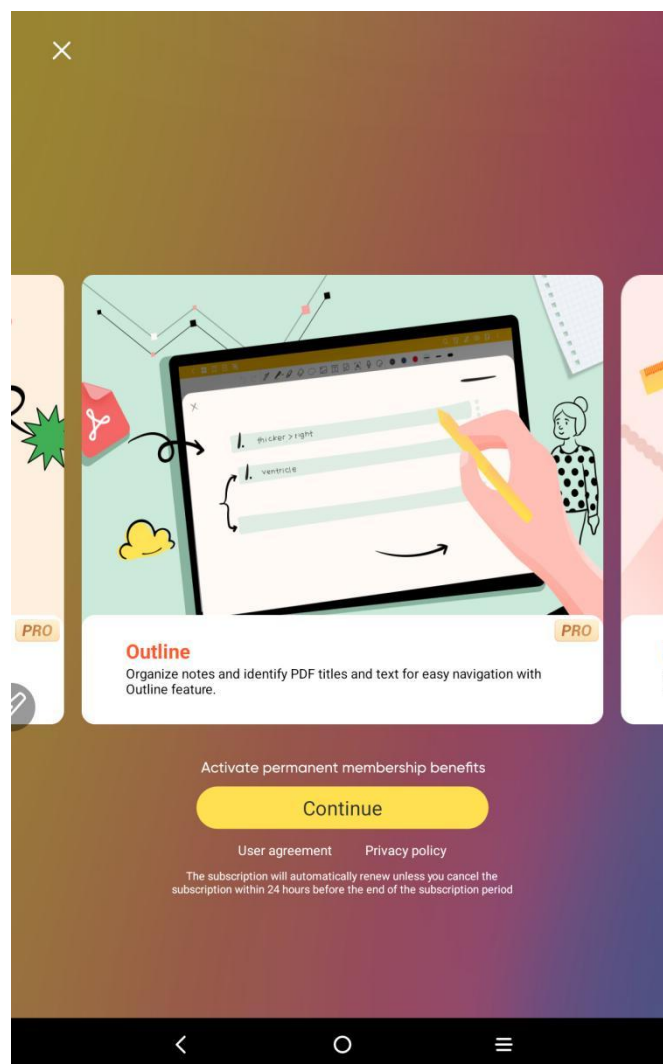

Step 4: After clicking "Continue", there are three ways to log in: mobile phone number,

Facebook, and Google. Choose one to log in (note that the login input security verification needs to distinguish between uppercase and lowercase letters)

×



Verification code login Password login

Unregistered email will be registered automatically after verification

Enter email

Get code

By continuing, you agree to our terms of [\(service\)](#) and [\(Privacy Policy\)](#)



Step 5: After successful login, you can return to the member center to view member

information without activating the membership.




## 8.2 WPS Benefits Collection


The steps are as follows:

Step 1: Go to the desktop homepage or application drawer


Step 2: Find and open the WPS app

Step 3: Login account. If you don't have an account, please register and log in.

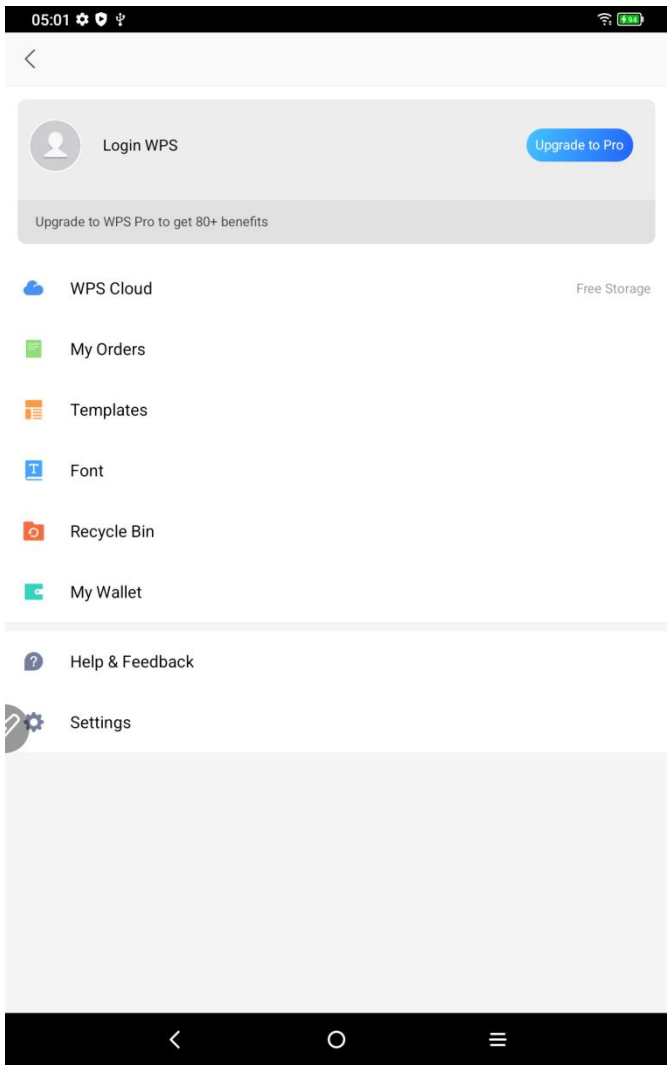

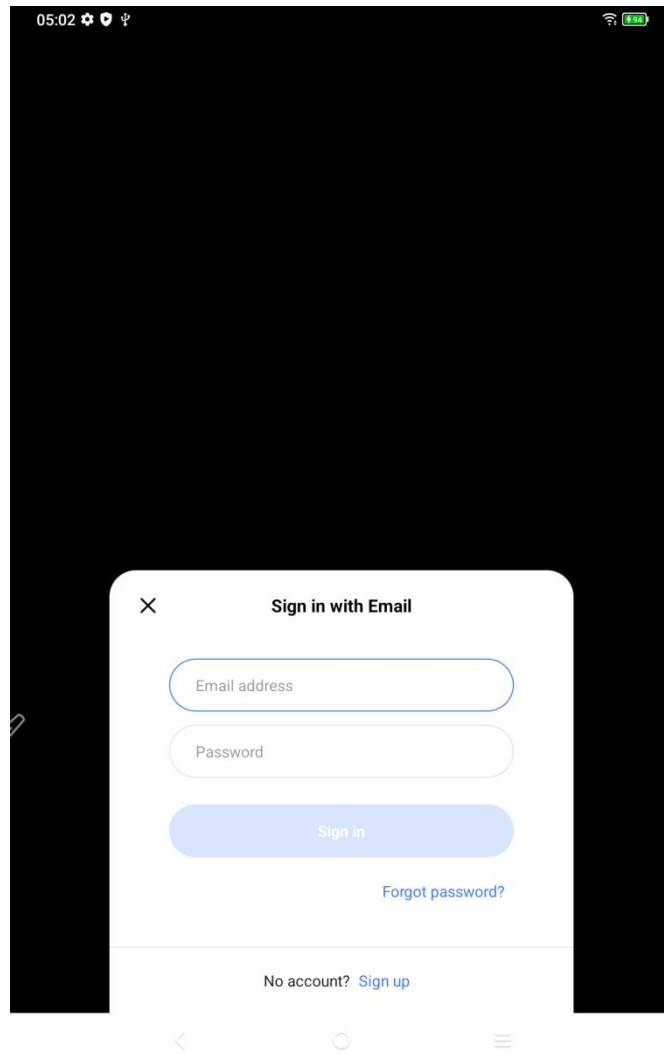

 Step 4: Upgrade to WPS Pro membership



WP WPS\_1738922781

Upgrade to Pro

Upgrade to WPS Pro to get 80+ benefits

WPS Cloud 0B/1GB

My Orders

Templates


Font


Recycle Bin

My Wallet

Help & Feedback

Settings

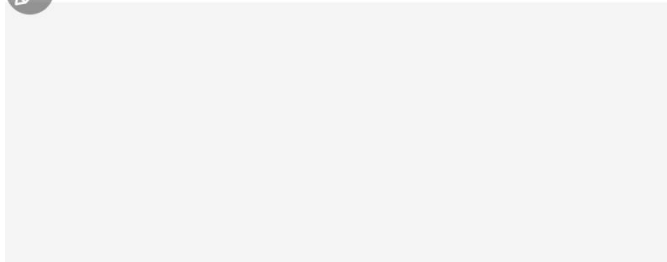

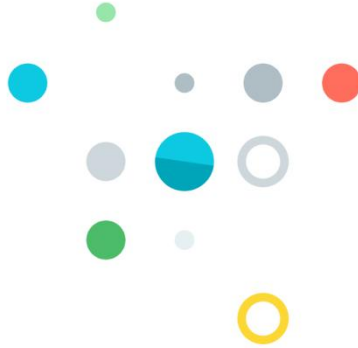

Step 5: Choose an annual subscription and see 30 day trial information. After successful subscription, start a 30 day membership trial

11:40

Work easier with WPS Pro

WPS Pro integrates over 80 benefits to help you work more easily. Join now and start a new way of working.

**Yearly** 50% OFF  
30-day free trial, then \$35.99/year **\$2.99**/month  
~~\$5.99/month~~

**Monthly**  
Billed at \$5.99/month **\$5.99**/month

Upgrade to WPS Pro to enjoy all benefits

Powerful PDF Tools

- PDF Edit
- PDF to Word
- Fill Form

[Start 30-Day Free Trial →](#)

At the end of the free trial period, your subscription will automatically renew for the subsequent renewal period and amount unless canceled. You can cancel at any time during the trial or after renewal. Manage your subscriptions in the Google Play Store's subscription section. By purchasing, you agree to our Terms & Conditions and Privacy Policy. Membership purchase won't affect app use, non-paid features remain accessible.

Attention: Users can cancel the renewal at any time during these 30 days, and there will be no charges after expiration. If not canceled, the fee will be deducted after 30 days.